

RGIS



COUNT



Primary Function: **Short press to launch the imager/laser**

Secondary Function:
Switches on the Figure Laser



Primary Function: **QTY 1**

Secondary Function:
Long press to cancel the previous entered quantity



Primary Function: **QTY 2**

Secondary Function:
Long press to activate the torch



Primary Function: **QTY 3**

Secondary Function:
Long press to complete an Area



Combo Function: **QTY 6**
Short press



Combo Function: **QTY 12**
Short press



Get Help

This icon will be available on certain screens – press the icon for help if you are stuck and you will be provided with on screen prompts to guide you.



Language

Press this icon to change the language.



Get Event

Press this icon to load your event onto your device.



Pairing

Press this icon to pair or unpair your Figure Laser to your device.



Regular Count

Press this icon to enter the count screen to begin or continue entering inventory data into your event.



Send

Press this icon to manually send the count data from your device to the U Count cloud server.



Data

Press this icon to review data previously sent. This includes the option to re-send any previously sent data.



Log Off

Select this option to log off from your device after your event is completed.